单色双面印刷 折叠尺寸: 55*90mm(展开尺寸: 440*90mm) 印刷红线框去掉,黑色虚线保留

物料\编号: 16060247 版本号: 客户名称: 加雪龙 设计师: 窦婵玉 对接人: 徐运辇/钟润冰 2023.9.27

GCIRON®

BIKE LIGHT WITH HORN

User Manual

V18-200

 
⚠ WARNING

- * Please charge the product at the environmental temperature from 5 to 40 degrees Celsius; * Please check whether the charging cable is good before
- * When charging, please use the 5V USB power adapter;
- * After charging, be sure to unplug the charging connector;
- * Please do not charge, discharge or store in the hot environment, otherwise it will accelerate the aging of the battery; Please store the fully charged headlights in a cool

and dry place:

- * After the correct charge, if the battery life gets shorter and shorter, it means that the rechargeable battery has reached the end of the effective service life. Please replace the battery at the local maintenance point and properly dispose of the waste rechargeable battery according to local regulations;
- * This product should be charged once every 3 months without use, so as not to cause damage to the battery and resulting in unusable condition;
- * Please do not stare at the light when it is just turned on to avoid damaging the eyesight;
- * Please do not turn on the horn close to the ears.
- * After the light is used for a long time, please do not touch the light to avoid getting scald
- * Children are forbidden to use without adults' supervision.

1. PRODUCT INSTRUCTION



Bike Light with Horn

GGCIRON®


Œ



Wire Remote Control & Anti-Slip Sticker

2. INSTALLATION

1 Mount the bracket to the handlebar as below picture, and tighten the nut.

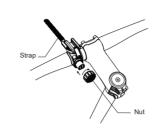


2 Slide the bottom of the bike light with horn into the bracket. When you hear a "click" sound, the installation is completed. Please adjust the light angle.



3. INSTALLATION OF REMOTE CONTROL


Paste the anti-slip sticker on the back of the wire remote control. Open the Type-C rubber plug at the bottom of the light, insert the wire remote control into the light in place. Tie the remote control firmly to the handlebar at appropriate position.

(Press the remote control to ring the horn, which works the same way as flick forward the toggle lever)

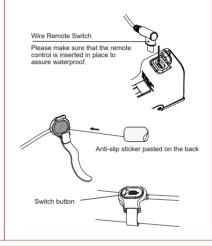

4. CHARGING

Uncover the Type-C rubber plug at the bottom of the light, plug in the Type-C charging cable and connect the charging device. When the button battery indicator flashes in red, the charging starts. When it is fully charged, the battery indicator turns blue.

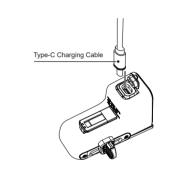

Warranty Certificate

Address: Purchase Date: _____Year____ Month_____Date

The Following Are Filled In By The Consignee:

User's Information(Filled In By User)

Sales Information:

Sales Company (Stamped With Company Seal)

Nearby Service Guidance(Customer First Contact Point)

Warranty Card

1.Please contact the wholesaler for customer service. For inherent problems under correct use, we accept a return within seven days since purchase. Users are allowed to replace a new product of the same model within fifteen days since purchase, and package is excluded in the replacement.

2 Purchase date is defined in accordance with the invoice or receint made by wholesaler.

but we offer a paid repair service.

(2)User's independent repairing and modifying or other nauthorized maintenance.

show your invoice or receipt when the service is needed.

improper uses. (1)Hidden safety factors or incidents caused by user's improper operation

(2)Hidden safety factors or incidents caused by irresistible factors. (3)Damages or accidents or injuries caused by user's independent operation against the manual or, using other materials on the product

6. Wherever you purchase this product, you have the total access to equivalent services from the nearest customer service center; if the

please make a phone call to us or email to our customer service

5. OPERATION AND FUNCTION

3. Under the following circumstances, return and fix are both invalidated,

(1)All damages caused by subjective factors, such as using under abnormal conditions or against the user manual.

(3)Damages caused by improper shipping.

4. We offer return/maintenance service by presenting this card, please 5.Gaciron is irresponsible for any damages caused by the following

or other accidents.

which causes malfunction

problem is not solved to your satisfaction,

7. The right of modification and interpretation on the above terms is held.

Flick backward the toggle lever to change the sound of the horn



Flick forward toggle lever to ring the horn (Press the remote control to ring the horn, which works the same as flick forward the lever)


Turn On/Off: Long press the power button for 0.75 seconds.

Change Modes: Short press the power button (50 lm constant -100 lm constant - 200 lm constant - 200 lm flash - cycle).

| | Control Mode | vvorking mode | Running Time |
|--|--------------------|------------------------------|--------------|
| | On / Off Switch | High Steady 200 lm | ≈2.5 hrs |
| | | Medium Steady 100 lm | ≈5 hrs |
| | | Low Steady 50 lm | ≈10 hrs |
| | | High Flash 200 lm | ≈15 hrs |
| | Toggle lever | No.1 Horn Sound+Flash 200 lm | ≈13000 Times |
| | | No.2 Horn Sound+Flash 200 lm | ≈15000 Times |
| | | No.3 Horn Sound+Flash 200 lm | ≈15000 Times |
| | | No.4 Horn Sound+Flash 200 lm | ≈5000 Times |
| | | | |

Volume Adjustment: Long press the power button for 3 seconds,it triggers the horn to ring. When the indicator light turns purple, it enters the volume adjustment mode. Flick forward the toggle lever to increase the volume by one gear until maximum volume and it triggers the horn. Flick backward the toggle lever to reduce the volume for one gear until minimum volume and it triggers the horn. The volume adjustment is confirmed with the current volume by single pressing the power button or without operation for 2 minutes. (There are 5 gears of volume).

Long Press 3 seconds to adjust the volume

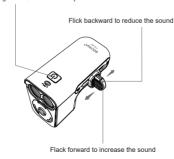

Toggle Lever: Flick forward in any status to trigger horn + flashing. Flick backward for 2 seconds will change the sound of the horn. Without the operation of flicking forward, each operation of flicking backward is to select the sounds and the selection is confirmed by flicking forward or without operation for 2 minutes.

Light Angle Adjustment

the eyes of drivers and pedestrians.

the nut after adjustment.

Loosen the nut of the bracket and adjust the light

angle up and down to meet your actual need. Tighten

Attention: The light should avoid direct exposure to

Flick backward and long press for 2 seconds to change the sound Flick forward to confirm the sound

With memory function (Default restore to the mode used previously when turning on).

| Remaining Battery | Indicator Color |
|-------------------------|-----------------|
| 100-21% | Blue |
| 20-1% | Red Flash |
| Charging Time: ≈3 hours | |

Circuit Protection:

Overcharge protection / Overdischarge protection / Short circuit protection

6. SPECIFICATION

Model

| Light Source | LED*2 |
|------------------------|--------------|
| Max Brightness | 200 lm |
| Max Volume | 120 dB |
| Volume Adjustment Mode | 5 |
| Input | 5V / 1.0A |
| Battery | 2000mAh |
| Max Working Time | ≈15 h |
| Charging Time | ≈3h |
| Floodlight Angle | >118° |
| Beam Distance | >150m |
| Waterproof | IPX6 |
| Dimension | 86*58*60.3mm |
| Net Weight | ≈111g |

V/18-200



Shenzhen Gaciron Technology Co.,Ltd

Headquarters: Rm101, Joinin Hub, Innovation Community, Honglang North, No. 49th, Dabao Rd, 28th District, Bao'an, Shenzhen, China Customer Service Hotline: 86 755 23322700

Website: www.gaciron.com

Product Standard: Q/JXL 004-2022

Made in China



